





TLP  
LHR-RM

INSTALLATION MANUAL  
MONTAGEANLEITUNG  
MANUALE DI MONTAGGIO  
MONTERING SANVISNING

MONTAGE ANVISNING  
MONTAGE VEJLEDNING  
ИНСТРУКЦИЯ ПО МОНТАЖУ  
INSTRUKCJA MONTOWANIA

MONTĀŽAS INSTRUKCIJA  
MONTAVIMO INSTRUKCIJA  
MONTAGEHANDLEIDIG  
ASENNUSOHJEET

RDOC-MI-PAV-TLP-LHR-RM-01

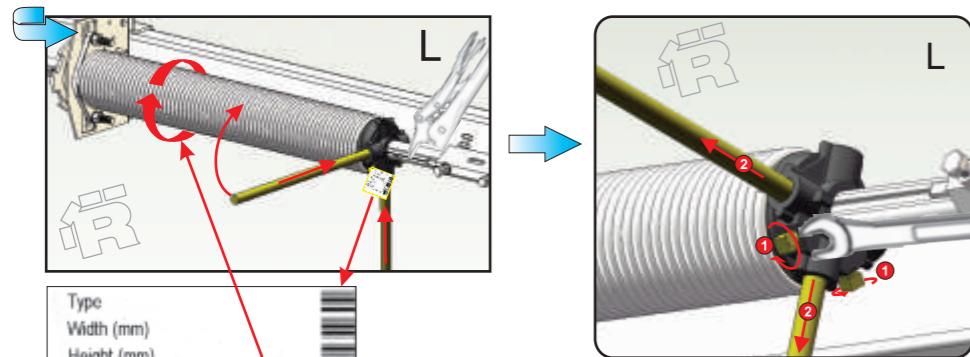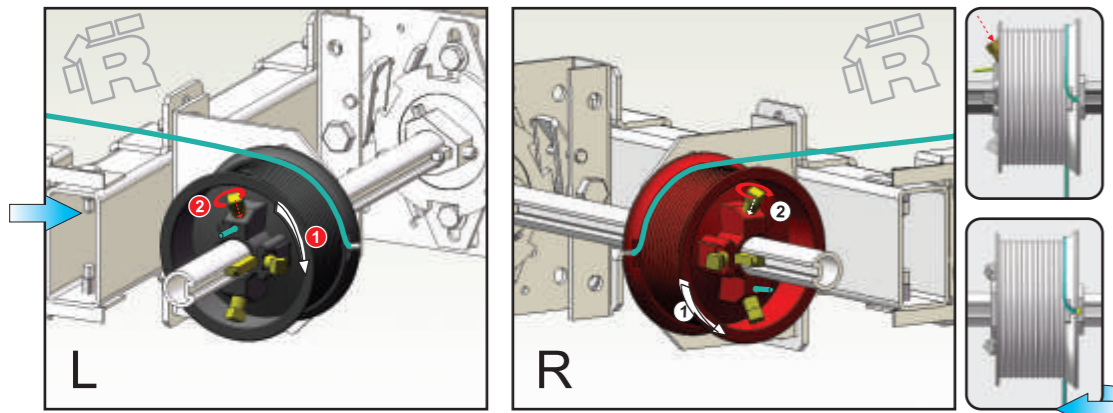

Type  
Width (mm)  
Height (mm)  
Weight (kg)  
Springs Type  
Spring turns  
Springs

